



**AM-BOSS**  
ACCESS LADDERS



**AM-BOSS Access Ladders are CodeMark Certified**

## **OPERATING AND MAINTANANCE PROCEDURE ON AM-BOSS ACCESS LADDERS.**

*AM-BOSS Access Ladders work on a reliable counter balance spring system.*

### **OPENING**

Engage hook on pole (supplied) into small eyelet on opening end of ceiling access panel. Gently pull door open till it comes to rest against the stops on the adjusting mechanism. No need to unhook the pole from the panel. Firmly grab ladder section (with rubber feet) with both hands and, stepping backwards, unfold and extend the ladder to the floor.

### **CLOSING**

With both hands lift up bottom section of ladder and fold back up on top of each other. With the use of the pole gently first push, then ease panel back up till it is fully closed. The spring counter balance system will keep the panel shut.

### **MAINTENANCE**

ALL MOVING PARTS ARE FACTORY PRE-LUBRICATED AND LUBRICATION SHOULD NOT BE REQUIRED FOR SOME TIME. HOWEVER SHOULD OPERATION OF THE UNIT BE IN EXCESS OF 3 TO 5 TIMES A DAY, ALL MOVING PARTS MUST BE LUBRICATED ONCE EVERY TWO MONTHS. MOST IMPORTANT IS THE LUBRICATION OF THE **PIVOT POINT** OF THE LINKAGE-ARMS JOINED TO THE SIDE PLATE WITH THE ADJUSTING SYSTEM. **THIS PART DOES MOST OF THE WORK.**

**INSPECTION OF THE WHOLE SYSTEM MUST BE  
CARRIED OUT ONCE A YEAR AND ACTION TAKEN**